

Config files

DSX configuration is done through dedicated configuration files. The following files are evaluated in order:

- `$(DSX_DIR)/conf/dsx.conf`

Default config, system wide.

- `~/.asim/dsx.conf`
- `~/.soclib/dsx.conf`

In your home dir, default config, user wide

- `./dsx.conf`

Setup for current directory / project.

Syntax

```
# Comment  
key = value
```

Values to define

- Path to MutekH

```
mutekh_dir = "/path/to/mutekh"
```