

Options when instanciating MutekS

Verbosity

DsxLogging facility will output log messages only if more important than current selected level. You may override this level by setting verbosity e.g.:

```
muteks = MutekS( verbosity = "TRACE" )
```

Stack usage tracing

MutekS has fixed limited stack depth for all functions (defined at software task implementation declaration). Rather than trying different values and watching your software crash, you may want to put a big stack space, and watch which part of the available space was actually used. This can be achieved setting `STACK_TRACE` flag:

```
muteks = MutekS( features = [ "STACK_TRACE" ] )
```