In order to use MutekH, you may need to:

- <u>Have a working cross-compiler</u>
- Understand the <u>BuildSystem</u>
- Try the Quick start guide for SoCLib platforms, which covers the (non-soclib) EMU target in the beginning